


 







 

 









 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Media		Display / Media
	Portal		Shift + Menu /
	Help		Shift + Info / Angle
	Menu		Menu / Home
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/--
	i		Info / Angle
	Vol +		Vol+
	Back		Back / Return
	CH +		CH+ / Page+
	Vol -		Vol-
	Filelist		Smart / List
	CH -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	l<<		l<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>l		>>l / Preset+
	TV / Radio		TV/Radio /
	Audio		Audio / Lang I/II
	Subt		Subtitle / EQ
	TTX		Text / Goto
	Timer		Shift + Sleep / Timer
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

