









 

 

 
























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	FAV / Eject		Fav / Marker / PC
	FAV / Eject		Eject / Surround
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Scaler		Menu / Home
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



 




















 










Originalfernbedienung Ersatzfernbedienung

	0		0
	-/--		Guide / EPG / -/--
	Recall		Back / Return
	Setup		Setup / OPT /
	Exit		Exit / Cancel / Clear
	Call		Smart / List
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Text / Play		Text / Goto










Originalfernbedienung Ersatzfernbedienung

	Text / Play		Play / Slow
	Mix / Pause/Play		Pause / Step / Freeze
	Index / Stop		Stop / Hold
	I/II		Shift + Audio / Lang I/II
	Cancel / <<		Shift + Exit / Cancel / Clear
	Cancel / <<		<< / Tune-
	Reveal / >>		>> / Tune+
	Hold / I<<		I<< / Preset-
	Hold / I<<		Shift + Stop /
	Size / >>I		>>I / Preset+
	Size / >>I		Zoom / Size
	Red / Goto		Red / Netflix / Search
	Red / Goto		Shift + Text /
	Green / A-B		Green / APP / Repeat
	Green / A-B		Shift + Yellow / YouTube /
	Yellow / Repeat		Yellow / YouTube / Repeat
	Yellow / Repeat		Shift + Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue / Angle		Blue / Prime Video / Random
	Blue / Angle		Info / Angle
	S.Page /		D.Menu / Top
	Page- / Title		Shift + Sound / Title
	Page- / Title		Shift + CH- /
	Page+ / PBC		Shift + CH+ /
	Audio		Audio / Lang I/II
	i / Display		Display / Media
	Radio / Zoom-		TV/Radio /
	Radio / Zoom-		Shift + Down
	EPG / Zoom+		Shift + Up
	EPG / Zoom+		Shift + Guide / EPG / -/-
	S.Title / Subtitle		Subtitle / EQ

