



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu/Zoom		Zoom / Size
	Menu/Zoom		Menu / Home
	0		0
	USB	 + 	Shift + 8
	Title/Subtitle		Sound / Title
	Title/Subtitle		Subtitle / EQ

**Originalfernbedienung Ersatzfernbedienung**

	Angle/Audio		Audio / Lang I/II
	Angle/Audio		Info / Angle
	Prog/Repeat		Green / APP / Repeat
	Prog/Repeat		TV/Radio /
	Setup		Setup / OPT /
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	<<		<< / Tune-
	>>		>> / Tune+
	Vol+		Vol+
	I<<		I<< / Preset-





Originalfernbedienung    Ersatzfernbedienung

	>>		>>  / Preset+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Goto		Text / Goto
	Display		Display / Media

Originalfernbedienung    Ersatzfernbedienung


