



 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	A/V Mute		Mute / Dimmer
	Freeze		Pause / Step / Freeze
	E-Zoom-		I<< / Preset-
	E-Zoom+		>>I / Preset+
	Color Mode		Picture / Format
	Resize		D.Menu / Top
	Easy-MP		Setup / OPT /
	Source/Search		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Auto		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Esc		Exit / Cancel / Clear
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	?/Help		Back / Return
	Vol+		Vol+
	Pointer		Smart / List
	Page Up		CH+ / Page+
	Vol-		Vol-
	S-Video		Display / Media
	Page Down		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



