









 

















 





 

 

 






 

 

 

 

 
 
 
 
 
 
 
 




 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Info		Info / Angle
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Sat		Shift + 0
	Down		Down
	FAV		Fav / Marker / PC
	TV / Radio		TV/Radio /
	Guide		Guide / EPG / -/-
	Freeze		Pause / Step / Freeze
	Aux In		AV / Input / RDS
	UHF		Smart / List
	Red / Audio		Audio / Lang I/II
	Red / Audio		Red / Netflix / Search
	Green / Positioner		Green / APP / Repeat
	Yellow / Text		Yellow / YouTube / Repeat
	Yellow / Text		Text / Goto
	Blue / Audio R/L		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
AUDIO R/L Blue / Audio R/L	TITLE SOUND Sound / Title

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

