


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Time		3D
	Display		Info
	Open / Close		Eject
	Angle		Format
	Language		Dual
	Sub.Title		Subt
	Title		Smart
	Menu / PBC		Menu
	P / N		TV/R
	Return		Back
	Mute		Mute
	Play		Play
	Stop		Stop
	Up		Up
	Left		Left
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	I<< Prev		I<<
	>>I Next		>>I
	<< FR		<<
	>> FF		>>
	Zoom		Shift + Eject
	Setup		Options
	L / R		Media
	Repeat		Text
	Mark		Pre Ch
	Goto		AV
	Pause / Step		Pause
	Slow		List
	1		1
	2		2
	3		3



**Originalfernbedienung Ersatzfernbedienung**

4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
VOL+	Vol+	+ VOL	Vol +
VOL-	Vol-	VOL -	Vol -

Originalfernbedienung Ersatzfernbedienung

