
 




 
 

 
 


 
 


 






 


 


 

 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
App		Media	
Subt.List		Subt	
Sleep Timer		Sleep	
TV		TV/R	
Video		D. Menu	
Text		Text	
TV/SAT		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
		Back	
		Volume+	
		CH/Page+	
		Volume-	
		Audio	
		CH/Page-	
		1. ?	
		2abc	
		3def	
		4ghi	
		5jkl	
		6mno	
		7pqrm	
		8tuv	
		9wxyz	
		Guide Pilote	
		0/10	