 

 





 

 

 

 

 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S-T		Sound / Title
	Audio		Audio / Lang I/II
	3D		Picture / Format
	Timer		Sleep / Timer
	TV/R		TV/Radio /
	TXT		Text / Goto
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up/CH+		Up
	Info		Info / Angle
	Left/Vol-		Left
	OK		OK
	Right/Vol+		Right
	Exit		Exit / Cancel / Clear
	Down/CH-		Down
	←		Back / Return
	Vol+		Vol+
	List		Smart / List
	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	EPG		Guide / EPG / -/--				
	0		0				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

