 

 
 
 



 

 
 
 

 

 
 

 


 

 

 
 
 

 



 
 
 
 
 
 
 
 
 
 
 
 
 



 
 
 
 





 
 
 
 
 
 
 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Text		Text
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -

**Originalfernbedienung Ersatzfernbedienung**

	TV/R		TV/R
	Exit		Exit
	Menu		Menu
	Back		Back
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	APP / SAT		Media
	EPG		Guide
	List		List
	Audio		Dual





**Originalfernbedienung Ersatzfernbedienung**

Sub	Sub	AD SUBT	Subt
Pup	Pup	>>	>>
Info	Info	DISPLAY INFO	Info
Zoom	Zoom	ZOOM ▲	Eject
Pdn	Pdw	◀◀	I◀◀
Fav	FAV	FAV PRE-CH	Pre Ch
Fav+	FAV+	>>	>>
Fav-	FAV-	◀◀	◀◀

**Originalfernbedienung Ersatzfernbedienung**