

 

 

 

 

 

 

 

 

 

 



 













**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	EPG		Guide / EPG / -/--
	4		4
	5		5
	6		6
	Audio		Audio / Lang /II
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	Info		Info / Angle
	0		0
	Recall		Back / Return


 



**Originalfernbedienung    Ersatzfernbedienung**

	TV / Radio		TV/Radio /
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Record		Rec / Rec Mode
	Down		Down
	Stop		Stop / Hold
	Vol +		Vol+
	CH +		CH+ / Page+
	Vol -		Vol-
	TTX		Text / Goto
	FAV		Fav / Marker / PC
	CH -		CH- / Page-
	Media		Display / Media





Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 I<< Prev	 I<< / Preset-
 Play	 Play / Slow
 << Rew	 << / Tune-
 USB	 Shift + 8
 Next>>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Fwd >>	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Originalfernbedienung   Ersatzfernbedienung