
 
 


 

 
 
 
 



 


 





 
 

 

 

 
 












 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 List	Menu Off	 Exit
Reveal	 Options	Menu Down	 Down
Info	 Info	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Txt Stop	 Stop	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



**Originalfernbedienung Ersatzfernbedienung**

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Color+ P.Std	 + 	Shift + Format
Tone+	 + 	Shift + Ch +
Input		Media
Output		Smart
Color- S.Std	 + 	Shift + Dual
Audio-	 + 	Shift + Vol -
Tone-	 + 	Shift + Ch -
AV 2	 + 	Shift + AV

**Originalfernbedienung Ersatzfernbedienung**

Audio+	 + 	Shift + Vol +
3.*	 + 	Shift + Guide
4.# 16:9		Format
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow
Level R/Woofer	 + 	Shift + Blue

