






 

 

 


 
 
 



 

 
 






 







Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Opt?		Options
Info		Info
App		Media
Subt.List		Subt
Sleep Timer		Sleep
TV		TV/R
Video		D. Menu
Text		Text
Display	 + 	Shift + Info
Zoom		Eject
Menu		Menu
Menu Up		Up
Menu Left		Left
OK Enter		Ok

Originalfernbedienung Ersatzfernbedienung

Menu Right		Right
Exit		Exit
Menu Down		Down
Audio		Dual
Back		Back
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
9wxyz		9	
Guide Pilote		Guide	
0/10		0	
Tune-		I<<	
Sys/Serv		Smart	
Aft/Caf		3D	
Tune+		>>I	
FAV Pref.		Pre Ch	
Red		Red	
Freeze		Pause	
East		Rec	
Green		Green	
Lang./Rewind		<<	
H/V Play		Play	
LNB F.Forward		>>	
Yellow		Yellow	
Blue		Blue	

