













Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	TV/R		TV/Radio /
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SAT		Shift + 0
	SAT		Smart / List
	0		0
	PAUSE		Pause / Step / Freeze
	EPG		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat
	AUDIO		Audio / Lang I/II
	YELLOW		Yellow / YouTube / Repeat
	MENU		Menu / Home
	ZOOM		Zoom / Size
	BLUE		Blue / Prime Video / Random
	EXIT		Exit / Cancel / Clear
	LEFT		Left
	VOL -		Vol-
	UP		Up
	CH+		CH+ / Page+
	OK		OK
	RIGHT		Right
	VOL +		Vol+
	CH-		CH- / Page-
	DOWN		Down





Originalfernbedienung Ersatzfernbedienung

	PG UP	 + 	Shift + CH+ /
	PG DN	 + 	Shift + CH- /
	TXT		Text / Goto
	FAV		Fav / Marker / PC
	RECALL		Back / Return
	INFO		Info / Angle

Originalfernbedienung Ersatzfernbedienung



 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/R		TV/Radio /
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SAT		Shift + 0
	0		0
	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	EPG		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Audio		Audio / Lang I/II
	Yellow		Yellow / YouTube / Repeat
	SUB		Subtitle / EQ
	Menu		Menu / Home
	Blue		Blue / Prime Video / Random
	Zoom		Zoom / Size
	Exit		Exit / Cancel / Clear
	Vol-		Vol-
	Left		Left
	Up/CH+		Up
	Right		Right
	Vol+		Vol+
	OK		OK
	Down/CH-		Down
	PgUp		CH+ / Page+
	PgDn		CH- / Page-



