 

 

 
 



 





 
 


 


 

 
 

 

 

 



 

 

 
 






**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	EPG		Guide / EPG / -/--
	4		4
	5		5
	6		6
	Audio		Audio / Lang /II
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	Info		Info / Angle
	0		0
	Recall		Back / Return

**Originalfernbedienung    Ersatzfernbedienung**

	TV / Radio		TV/Radio /
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Record		Rec / Rec Mode
	Down		Down
	Stop		Stop / Hold
	Vol +		Vol+
	CH +		CH+ / Page+
	Vol -		Vol-
	TTX		Text / Goto
	FAV		Fav / Marker / PC
	CH -		CH- / Page-
	Media		Display / Media





Originalfernbedienung   Ersatzfernbedienung

	I<< Prev		I<< / Preset-
	Play		Play / Slow
	<< Rew		<< / Tune-
	USB	+	Shift + 8
	Next>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Fwd >>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung   Ersatzfernbedienung