












 

 























 

























**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Nicam/A2		Audio / Lang I/II
	Aspect		Shift + Picture / Format
	PMode		Picture / Format
	SMode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/-		Guide / EPG / -/-
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	Recall		Back / Return
	Display		Display / Media
	Freeze		Shift + Pause / Step /
	Auto/Goto		Shift + Text /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Media		Shift + Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	Text		Text / Goto
	Vol-		Vol-
	Hold		Shift + Stop /
	Reveal		Setup / OPT /
	Size		Zoom / Size
	Index		Smart / List
	S.Title		Subtitle / EQ
	S.Page		Eject / Surround
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	FAV		Fav / Marker / PC
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+

