









 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	←PR		Back
	EPG		Guide
	Menu		Menu
	PR+		Ch +

Originalfernbedienung Ersatzfernbedienung

	PR-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/List		Ok
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Exit		Exit
	↑		>>
	↓		<<
	Pause		Pause
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung Ersatzfernbedienung

	Audio	SOUND DUAL	Dual
	TXT	REPEAT TEXT	Text
	[...]	AD SUBT	Subt
	Audio L/R	SETTINGS OPT	Options
	[+]	ECO 3D	3D
	FAV	FAV PRE-CH	Pre Ch
	UHF	HOME SMART	Smart
	PAL/NTSC	PICTURE FORMAT	Format
	Tv/AV	TIMER AV	AV

Originalfernbedienung Ersatzfernbedienung

