 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV		Smart
	Tv/Rad		TV/R
	Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Sub		Subt

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	Menu		Menu
	Exit		Exit
	ALT		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Freeze		Pause
	Browse		Options
	Page+		>>
	Page-		<<



