



 
 

 










 
 
 
 

 




 


 
 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Recall		Back
	EPG		Guide
	Audio		Dual
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/R
	Menu		Menu
	Exit		Exit
	Record		Rec
	Stop		Stop
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	TTX		Text
	FAV		Pre Ch
	CH+		Ch +
	CH-		Ch -
	Media		Media





Originalfernbedienung **Ersatzfernbedienung**

	I<<		I<<
	Play		Play
	<<		<<
	USB		Smart
	>>I		>>I
	Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung **Ersatzfernbedienung**

