
 
 











 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Text		Text
	SUB		Subt
	TV / Radio		Shift + TV/R
	TV / STB		TV/R
	Audio		Dual
	Mute		Mute
	EPG		Guide
	List		List
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	A.Ratio		Format
	Vol +		Vol +
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -
	Back		Back
	APP		Media





Originalfernbedienung	Ersatzfernbedienung
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Originalfernbedienung	Ersatzfernbedienung

