

 



 

 

 









 







 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Speakers 1		CH+ / Page+
	Speakers 2		CH- / Page-
	PHONO		Shift + 8
	CD		Shift + 3
	VID 1		Shift + 1
	VID 2		Shift + 2
	VID 3		Shift + 4
	FM		Shift + 6
	AM		Shift + 7
	TAPE MON		Shift + 5
	FM Mode		Display / Media
	Auto Preset		Smart / List
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Direct		Guide / EPG / -/--
	0		0
	Clear		Exit / Cancel / Clear
	Memory		Fav / Marker / PC
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Preset Scan		Info / Angle
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Mute		Mute / Dimmer
	Tune Up		>> / Tune+
	Vol-		Vol-
	Tune Down		<< / Tune-
	Preset Down		<< / Preset-
	Preset Up		>> / Preset+
	Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

