


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	A/D/Content Menu		Smart / List
	P+		CH+ / Page+
	Vol-		Vol-

**Originalfernbedienung Ersatzfernbedienung**







	Mute		Mute / Dimmer
	P-		CH- / Page-
	Menu/DVD		Menu / Home
	Exit/Return		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Guide/Top		Guide / EPG / -/-
	Down		Down
	Tv/FAV/Radio/Set		TV/Radio /
	Tv/FAV/Radio/Set		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Picture / Format







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return

**Originalfernbedienung    Ersatzfernbedienung**


























	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Guide/Top		D.Menu / Top
	Down		Down
	Tv/FAV/Radio/Set		Setup / OPT /
	[<>]		Picture / Format
	<[ ]>		Display / Media
	[i+]/[≡i]		Info / Angle
	Text		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Eject		Eject / Surround
	O/I/II		Shift + Audio / Lang I/II
	Stop		Stop / Hold
	Play/[≡o]		Play / Slow







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	A/D / Content		Smart / List
	P+		CH+ / Page+
	Vol-		Vol-

**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute / Dimmer
	P-		CH- / Page-
	Menu/DVD		Menu / Home
	Exit/Return		Shift + Back / Return
	Exit/Return		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Guide/Top		D.Menu / Top
	Down		Down
	Tv/FAV/Radio/Set		TV/Radio /
	Tv/FAV/Radio/Set		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random



