






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Anyview Cast		Shift + Up
	Anyview Cast Off		Shift + Down
	TV		TV/Radio /
	Source		AV / Input / RDS
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	DMP		Display / Media
	Pause		Pause / Step / Freeze
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat

**Originalfernbedienung    Ersatzfernbedienung**

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	HiSmart		Smart / List
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	CH.List		Shift + Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	EPG		Guide / EPG / -/-
	CH-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
INFO	Info	ANGLE INFO	Info / Angle
0	0	HDMI - BAT 0	0
PRE CH	PRE-CH	RETURN BACK	Back / Return
I/II LANG.	Lang/I-II	LANG I/II AUDIO	Audio / Lang I/II
P.MODE	P.Mode	FORMAT PICTURE	Picture / Format
S.MODE	S.Mode	TITLE SOUND	Sound / Title
SIZE	Size	SIZE ZOOM	Zoom / Size
SUBT.	Subt.	EQ SUBTITLE	Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

TEXT	Text	GOTO TEXT	Text / Goto
INDEX	Index	TOP MENU D.MENU	D.Menu / Top
SUB PAGE	Subpage	OPT-TOOLS SETUP	Setup / OPT /

