



 


 



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[i+]		Info
	AV1		AV
	AV1		Shift + 1
	Rec/AV2		Shift + 2
	Rec/AV2		Rec
	Stop/AV3		Shift + 3
	Stop/AV3		Stop
	Play/AV4		Shift + 4
	Play/AV4		Play
	AV5		Shift + 5
	AV5		Shift + AV
	Pause/AV6		Shift + 6
	Pause/AV6		Pause
	<</RGB1		Shift + 7
	<</RGB1		<<
	>>/RGB2		>>

Originalfernbedienung Ersatzfernbedienung

	>>/RGB2		Shift + 8
	Menu		Menu
	[>I<]/Recall		Pre Ch
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	J/S.Mode		Shift + Dual
	(I)/P.Mode		Shift + Format
	Vol+		Vol +
	Vol-		Vol -
	I/II		Dual
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1





Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[]/2-4-12		Back
	[≡]		Guide
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡i]		Options
	[≡x]		TV/R



























 
 
Originalfernbedienung Ersatzfernbedienung

	[...]/Slide Show		Subt
	[≡?]/Rotate		3D
	[≡]		Text
	[<>]		Format
	Swivel		Smart
	Photo		Media



























 

 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	P+		Ch +
	P-		Ch -




 


Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0

