











 



 
 

 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang.		Dual
	[=].		Subt
	Home		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Input		AV
	P+		Ch +
	P-		Ch -
	[G]		Guide
	i		Info
	←		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Netflix		Media
	YouTube		TV/R
	Menu		Menu
	*1		Format
	<<		<<





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Stop		Stop				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

