







 






 





 





 
 
 


 

 
 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	MyEPG		Pre Ch
	V-Format		Format
	Wide		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	List		List
	Guide		Guide
	Exit		Exit
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	i		Info



