




































Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV Portal		Shift + 1
	0		0
	Menu		Menu / Home
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<< / ⌂		I<< / Preset-
	>>I / ⌂		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Media		Display / Media
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down



