




 



 
 


























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	TV / Radio		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Guide		Guide
	Back		Back
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red/ OPT+		Red
	Red / OPT+		Options
	Green / Audio		Green
	Green / Audio		Dual
	Yellow / Subtitle		Yellow
	Yellow / Subtitle		Subt
	Blue / G		Blue
	CH- / Page-		Ch -
	CH+ / Page+		Ch +
	V-		Vol -
	V+		Vol +
	Menu		Menu





Originalfernbedienung Ersatzfernbedienung

	i		Info
	Mute		Mute
	<<		<<
	>>		>>
	Play		Play
	Rec		Rec
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

