


 
 

 
























 




 


 
 
 

 

 

















 
 
 
 
 




Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Vol+		Vol +				
	Vol-		Vol -				
	CH+		Ch +				
	CH-		Ch -				
	Mute		Mute				
	Source		AV				

 

 

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Red		Red
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<

 






 

 















 

 



 
Originalfernbedienung Ersatzfernbedienung

	>>		>>
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Exit		Exit
	i		Info
	CH+		Ch +
	CH-		Ch -

 


 

 











 

 






 

 

 
 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	OK/List		Ok
	Guide		Guide
	Media		Media
	Left		Left
	Right		Right

**Originalfernbedienung    Ersatzfernbedienung**

	Down		Down
	Up		Up
	Exit		Exit
	Last		Back
	Info		Info
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play		Play
	Stop		Stop
	Pause		Pause


 






Originalfernbedienung    Ersatzfernbedienung

	Rec		Rec
	<<		<<
	>>		>>
	Sleep		Sleep
	Source		AV
	Wide		Format
	V-Format	 + 	Shift + Format
	OPT+		Options
	Edit		Eject
	Teletext		Text
	Tv/Radio		TV/R
	[...]		Subt
	[+≡]		D. Menu
	[?]		Smart
	I>	 + 	Shift + Pause
	I<<		I<<
	[≡ ≡]		List


 



 
Originalfernbedienung    Ersatzfernbedienung

	Audio		Dual
	>>		>>


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	<<		<<
	>>		>>
	Guide		Guide
	OK/List		Ok
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Exit		Exit
	Info		Info
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -

