



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv/J		TV/R
	Menu		Menu
	APP		Media
	Disp		Shift + Info
	Back		Back
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Pause		Pause
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

9 WXYZ	9	9	9
0 .#	0	0	0
LIST	List	DISC NAV LIST	List
OPT	Opt.	SETTINGS OPT	Options

Originalfernbedienung Ersatzfernbedienung

