
 




 

 

 

 




 


 

 



 

 

 






 










 




 







 

 
 
 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Slow Up		Ch +	
Stop		Stop	
Slow Down		Ch -	
Pause		Pause	
Subt.		Subt	
Auto/Track		Smart	
Title		List	
Rep/A-B		TV/R	
Repeat/1/All		Text	
Zoom		Eject	
DVD/TV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Down		Down	
Next		>>	
Return		Back	
Top Menu		D. Menu	
Progr.		Sleep	
Prev.		<<	
Volume+		Vol +	
Volume-		Vol -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
9			
+10			
0			
C/CH			
Play			





 




 


 
 

 

 

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Slow Up		Ch +	
Stop		Stop	
Pause		Pause	
Slow Down		Ch -	
Subt.		Subt	
Auto/Track		Smart	
Rep/A-B		TV/R	
Repeat/1/All		Text	
Zoom		Eject	
DVD/TV		AV	
Title		List	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Down		Down	
Progr.		Sleep	
Return		Back	
Volume+		Vol +	
Next		>>	
Volume-		Vol -	
1		1	
Top Menu		D. Menu	
Prev.		<<	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



 


 





 



 
 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
9			
+10			
0			
C/CH			
Play			



**Originalfernbedienung Ersatzfernbedienung**

On/Off		Power
Menu Down		Down
Audio Off		Mute
Slow Down		Ch -
Stop		Stop
Slow Up		Ch +
Pause		Pause
Subt.		Subt
Rep/A-B		TV/R
Repeat/1/All		Text
Zoom		Eject
Auto/Track		Smart
DVD/TV		AV
Title		List
Menu		Menu
Return		Back
Menu Up		Up

**Originalfernbedienung Ersatzfernbedienung**


 


 

 

 



 

 


 


 
 






 
 




Progr.		Sleep
Display		Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Volume+		Vol +
Volume-		Vol -
1		1
2		2
3		3
4		4
Next		>>
5		5
Top Menu		D. Menu
6		6
Prev.		<<
7		7





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------	-----------------------	---------------------

8		8	
9		9	
+10		Guide	
0		0	
C/CH		Pre Ch	
Play		Play	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Progr.	 Sleep
Audio Off		Menu Left	 Left
Stop		Next	 >>
Slow Up		OK Enter	 Ok
Auto/Track		Top Menu	 D. Menu
Slow Down		Prev.	  <<
Pause		Menu Right	 Right
Title		Menu Down	 Down
Subt.		Volume+	 Vol +
Rep/A-B		Volume-	 Vol -
Repeat/1/All		1	 1
Zoom		2	 2
DVD/TV		3	 3
Menu		4	 4
Menu Up		5	 5
Return		6	 6
Display		7	 7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
9			
+10			
0			
C/CH			
Play			

