



Originalfernbedienung Ersatzfernbedienung












| | | | |
|---|------------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | TV / Video |  | TV/R |
|  | V.Size |  | Eject |
|  | PIP |  | Smart |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Text |  | Text |
|  | Pre Pg |  | Pre Ch |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | Menu / Sel |  | Menu |
|  | Menu / Sel |  | Ok |
|  | Exit |  | Exit |
|  | Up / PG+ |  | Up |
|  | Up / PG+ |  | Ch + |
|  | Down / PG- |  | Down |
|  | Down / PG- |  | Ch - |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol + |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol - |
|  | MTS |  | Media |
|  | PG Info |  | Info |
|  | Still |  | Pause |
|  | Picture |  | Format |
|  | Sound |  | Dual |
|  | Sleep |  | Sleep |





| Originalfernbedienung | | Ersatzfernbedienung | | Originalfernbedienung | | Ersatzfernbedienung | |
|---|-----------------|---|---------|-----------------------|--|---------------------|--|
|  | Bright |  | Options | | | | |
|  | Red / Erase |  | Red | | | | |
|  | Time |  | AV | | | | |
|  | Green / Skip |  | Green | | | | |
|  | Yellow / Insert |  | Yellow | | | | |
|  | Blue / Replace |  | Blue | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

