





































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	VCR		Smart
	DVD		Media
	Input		AV
	1/Tracking-		1
	2		2
	3/Tracking+		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	System		D. Menu
	Clear		Exit


 

 
 
 
 

Originalfernbedienung Ersatzfernbedienung

	Setup		Options
	Display		Info
	Title/PBC		Back
	Menu		Menu
	Up/PR+		Up
	Down/PR-		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Subtitle		Subt
	Audio		Dual
	Search		Shift + TV/R
	Zoom		Shift + Eject
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	Stop		Stop
	>>I		>>I
	Rec		Rec
	Speed		Format
	Repeat		Text
	A-B		Red
	Tv/VCR		TV/R
	3D		3D
	Mark		List
	Angle		Guide
	CM Skip		Yellow
	Replay		Green
	Last CH		Pre Ch
	Program		Sleep

Originalfernbedienung Ersatzfernbedienung

