



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Netflix	+	Shift + Red / Netflix /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	i		Info / Angle
	PR-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	EXit		Exit / Cancel / Clear
	World		Smart / List
	Camera/Music/Ph		Display / Media
	Guide		Guide / EPG / -/-
	*/o		Picture / Format
	Games		AV / Input / RDS





Originalfernbedienung Ersatzfernbedienung

Table mapping original remote buttons to replacement remote buttons. Includes columns for Originalfernbedienung and Ersatzfernbedienung with corresponding icons and labels.

Originalfernbedienung Ersatzfernbedienung

Empty table grid for mapping original remote buttons to replacement remote buttons.

