


















Originalfernbedienung Ersatzfernbedienung

|             |   |                       |
|-------------|---|-----------------------|
| On/Off      |    | Power                 |
| Mute        |    | Mute / Dimmer         |
| Txt Stop    |    | Stop / Hold           |
| Reveal      |    | Pause / Step / Freeze |
| Update      |    | Play / Slow           |
| Info        |    | Info / Angle          |
| Subt.List   |    | Subtitle / EQ         |
| Sleep Timer |    | Sleep / Timer         |
| Return TV   |    | TV/Radio /            |
| Menu video  |   | D.Menu / Top          |
| Text        |  | Text / Goto           |
| Txt Expand  |  | Zoom / Size           |
| TV/AV       |  | AV / Input / RDS      |
| Menu        |  | Menu / Home           |
| Menu Up     |  | Up                    |
| Display     |  | Display / Media       |
| Menu Left   |  | Left                  |

Originalfernbedienung Ersatzfernbedienung





 
 
 
 
 
 

|            |   |                       |
|------------|---|-----------------------|
| OK Enter   |    | OK                    |
| Menu Right |    | Right                 |
| Menu Off   |    | Exit / Cancel / Clear |
| Menu Down  |    | Down                  |
| Back       |    | Back / Return         |
| Volume+    |    | Vol+                  |
| Chan.Up    |    | CH+ / Page+           |
| Volume-    |    | Vol-                  |
| Menu audio |    | Audio / Lang I/II     |
| Chan.Down  |   | CH- / Page-           |
| 1          |  | 1                     |
| 2          |  | 2                     |
| 3          |  | 3                     |
| 4          |  | 4                     |
| 5          |  | 5                     |
| 6          |  | 6                     |
| 7          |  | 7                     |



Originalfernbedienung Ersatzfernbedienung

|               |   |                             |
|---------------|---|-----------------------------|
| 8             |    | 8                           |
| 9             |    | 9                           |
| Guide -/-- 1. |    | Guide / EPG / -/--          |
| 0/10          |    | 0                           |
| 2.Fav P/C 2.  |    | Fav / Marker / PC           |
| Red           |    | Red / Netflix / Search      |
| Green         |    | Green / APP / Repeat        |
| Yellow        |    | Yellow / YouTube / Repeat   |
| Blue          |    | Blue / Prime Video / Random |
| Color+ P.Std  |    | Picture / Format            |
| Off/Tim       |    | Setup / OPT /               |
| Tune-         |  | << / Tune-                  |
| Audio-        |  | Shift + Vol-                |
| Mix Scan      |  | Smart / List                |
| Audio+        |  | Shift + Vol+                |
| Game Coo      |  | Rec / Rec Mode              |
| Tune+         |  | >> / Tune+                  |

Originalfernbedienung Ersatzfernbedienung

|                 |   |                           |
|-----------------|---|---------------------------|
| Color- S.Std    |  | Sound / Title             |
| Contrast+       |  | >>  / Preset+             |
| Contrast-       |  | << / Preset-              |
| Surround        |  | Eject / Surround          |
| Nicam/Mono      |  | Shift + Audio / Lang I/II |
| AV 2            |  | Shift + AV / Input / RDS  |
| Bright+ Mode    |  | Shift + CH+ /             |
| Level L         |  | Shift + Left              |
| Level R/Woofers |  | Shift + Right             |
| Disp            |  | Shift + Display / Media   |
| Bright- Sys     |  | Shift + CH- /             |
|                 |   |                           |
|                 |   |                           |
|                 |   |                           |
|                 |   |                           |
|                 |   |                           |
|                 |   |                           |
|                 |   |                           |
|                 |   |                           |

