



 
 
 

 
 
 

 

 
 
 

 






 

 

 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	M		Menu
	--		Guide
	Up		Up
	OK		Ok
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Sound		Dual
	Green		Green
	Picture		Format
	Yellow		Yellow
	Feature		Media
	Blue		Blue
	Install		Smart
	AV		AV
	TV		TV/R
	TXT		Text
	Mute		Mute

