











Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	P100		Fav / Marker / PC
	Power		Power
	Reveal		Info / Angle
	Double		Smart / List
	1		1
	2		2
	3		3
	Hold		Stop / Hold
	4		4
	5		5
	6		6
	SUB		Subtitle / EQ
	7		7
	8		8
	9		9
	Update		Display / Media

Originalfernbedienung Ersatzfernbedienung

	AV		AV / Input / RDS
	0		0
	Guide / EPG / -/--		Guide / EPG / -/--
	Mix		Shift + Text /
	TV/TX		Text / Goto
	PR+		CH+ / Page+
	Up		Up
	Menu		Menu / Home
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Swap		Back / Return
	PR-		CH- / Page-
	Down		Down
	16:9		Setup / OPT /



