





















 














 

















 







Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	Fade Muting		Mute / Dimmer
	Play /DVD/CD		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<< Slow-		<< / Tune-
	>> Slow+		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Sound Turbo II		Sound / Title
	Audio/MPX		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Scan Mode		Eject / Surround
	Bass/Treble		Picture / Format
	Zoom		Zoom / Size
	Sleep		Sleep / Timer
	TV/Video		TV/Radio /

 





 

 



 

 





 

 

 



 


 


Originalfernbedienung Ersatzfernbedienung

	Top Menu/PG		D.Menu / Top
	Setup		Setup / OPT /
	AHB PRO		Text / Goto
	On Screen		AV / Input / RDS
	Menu/PL		Menu / Home
	Up		Up
	TA/News/Info		Info / Angle
	Left		Left
	Enter/Set		OK
	Right		Right
	Cancel		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Audio Vol+		Vol+
	QP Link		Smart / List
	PTY+		CH+ / Page+
	Audio Vol-		Vol-



 




 





 



 









 







Originalfernbedienung Ersatzfernbedienung

 
	Display		Display / Media
	PTY-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		Guide / EPG / -/--
	0		0
	>10		Fav / Marker / PC
	PTY Search		Red / Netflix / Search
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	3D Phonic		Blue / Prime Video / Random
	Power TV		Shift + Power
	Dimmer		Shift + Mute / Dimmer
	Play/USB		Shift + Play /
	Group/Title Skip I<<		Shift + I<< / Preset-
	Group/Title Skip >>I		Shift + >>I / Preset+
	Group/Title		Shift + Sound / Title
	C.Voice		Shift + Audio / Lang I/II
	VFP		Shift + Subtitle / EQ
	Clock/Timer		Shift + Sleep / Timer
	FM/Play Mode		Shift + TV/Radio / Program
	Page		Shift + D.Menu / Top Menu
	Angle		Shift + Info / Angle
	Return		Shift + Back / Return
	TV Vol+		Shift + Vol+
	A.Standby		Shift + Smart / List
	TV CH+		Shift + CH+ / Page+

Page+



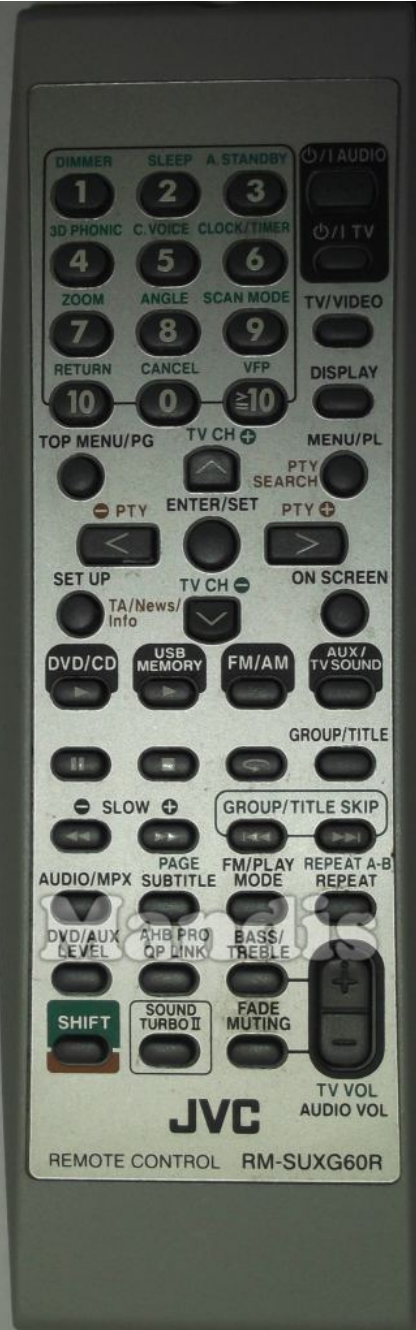

Originalfernbedienung Ersatzfernbedienung

	TV Vol-	 + 	Shift + Vol-
	TV CH-	 + 	Shift + CH- /
	DVD/AUX Level	 + 	Shift + 2
	FM/AM	 + 	Shift + 6
	AUX/TV Sound	 + 	Shift + 7

Originalfernbedienung Ersatzfernbedienung

