



Originalfernbedienung Ersatzfernbedienung

<b>TEST</b>	Test	<b>GOTO TEXT</b>	Text / Goto
<b>1</b>	1	<b>TV 1</b>	1
<b>1</b>	1 FM/AM	<b>SHIFT + TV 1</b>	Shift + 1
<b>2</b>	2	<b>DVD 2</b>	2
<b>2</b>	2 FM/AM	<b>SHIFT + DVD 2</b>	Shift + 2
<b>3</b>	3	<b>CD - STB 3</b>	3
<b>3</b>	3 FM/AM	<b>SHIFT + CD - STB 3</b>	Shift + 3
<b>EFFECT</b>	Effect	<b>FORMAT PICTURE</b>	Picture / Format
<b>4</b>	4	<b>VIDEO 4</b>	4
<b>4</b>	4 FM/AM	<b>SHIFT + VIDEO 4</b>	Shift + 4
<b>5</b>	5	<b>TAPE 5</b>	5
<b>5</b>	5 FM/AM	<b>SHIFT + TAPE 5</b>	Shift + 5
<b>6</b>	6	<b>TUNER 6</b>	6
<b>6</b>	6 FM/AM	<b>SHIFT + TUNER 6</b>	Shift + 6
<b>7/P</b>	7/P	<b>SHIFT + AUX - HDD 7</b>	Shift + 7
<b>7/P</b>	7 FM/AM	<b>AUX - HDD 7</b>	7
<b>8</b>	8	<b>USB 8</b>	8

Originalfernbedienung Ersatzfernbedienung

<b>8</b>	8 FM/AM	<b>SHIFT + USB 8</b>	Shift + 8
<b>9</b>	9	<b>BLUETOOTH 9</b>	9
<b>9</b>	9 FM/AM	<b>SHIFT + BLUETOOTH 9</b>	Shift + 9
<b>*LEVEL</b>	Level- SURR L	<b>Down</b>	Down
<b>*LEVEL</b>	Level - SURR R	<b>SHIFT + Down</b>	Shift + Down
<b>*LEVEL</b>	Level- Center	<b>SHIFT + CH PAGE -</b>	Shift + CH- /
<b>*LEVEL</b>	Level- SUBWFR	<b>Left</b>	Left
<b>*LEVEL</b>	Level- Front L	<b>VOL -</b>	Vol-
<b>*LEVEL</b>	Level- Front R	<b>CH PAGE -</b>	CH- / Page-
<b>*LEVEL+</b>	Level+ SURR L	<b>Up</b>	Up
<b>*LEVEL+</b>	Level+ SURR R	<b>SHIFT + Up</b>	Shift + Up
<b>*LEVEL+</b>	Level+ Center	<b>SHIFT + CH PAGE +</b>	Shift + CH+ /
<b>*LEVEL+</b>	Level+ SUBWFR	<b>Right</b>	Right
<b>*LEVEL+</b>	Level+ Front L	<b>+ VOL</b>	Vol+
<b>*LEVEL+</b>	Level+ Front R	<b>+ CH PAGE</b>	CH+ / Page+
<b>10</b>	10/Return	<b>SHIFT + GUIDE EPG</b>	Shift + Guide / EPG / -/-
<b>10</b>	10 FM/AM	<b>GUIDE EPG</b>	Guide / EPG / -/-





Originalfernbedienung    Ersatzfernbedienung

	0		0
	+10/+100		Fav / Marker / PC
	+10 FM/AM	+	Shift + 0
	Play/TA/News/Info	+	Shift + Play /
	Play FM/AM		Play / Slow
	I<</PTY-	+	Shift + I<< / Preset-
	I<<FM/AM		I<< / Preset-
	Pause/PTY Search	+	Shift + Pause / Step /
	Pause FM/AM		Pause / Step / Freeze
	>>I/PTY+	+	Shift + >>I / Preset+
	>>I FM/AM		>>I / Preset+
	Stop/Display	+	Shift + Stop /
	Stop FM/AM		Stop / Hold
	FM/AM	+	Shift + TV/Radio / Program
	FM Mode		TV/Radio /

Originalfernbedienung    Ersatzfernbedienung








Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Right		Right
	Menu		Menu / Home
	Down		Down
	Enter		OK
	Play/TA/News/Info	+	Shift + Play /
	Play VCR		Play / Slow
	I<</PTY-	+	Shift + I<< / Preset-
	I<< VCR		I<< / Preset-
	Pause/PTY Search	+	Shift + Pause / Step /
	Pause VCR		Pause / Step / Freeze
	>>I/PTY+	+	Shift + >>I / Preset+
	>>I VCR		>>I / Preset+
	Rec Pause VCR		Rec / Rec Mode
	Stop/Display		Stop / Hold
	Stop VCR	+	Shift + Stop / Hold

Originalfernbedienung Ersatzfernbedienung


Hold





**Originalfernbedienung Ersatzfernbedienung**

	Audio Standby		Audio / Lang I/II
	1		1
	2		2
	3		3
	TV Standby		Power
	4		4
	5		5
	6		6
	VCR Standby		Shift + Power
	7/P		7
	DVD Standby		Shift + 2
	Play/TA/News/Info		Play / Slow
	Sleep		Sleep / Timer
	I<</PTY-		I<< / Preset-
	Pause/PTY Search		Pause / Step / Freeze
	>>I/PTY+		>>I / Preset+
	Stop/Display		Stop / Hold

**Originalfernbedienung Ersatzfernbedienung**

	FM/AM		Shift + TV/Radio / Program
	VCR		Shift + 4
	Analog/Digital		Smart / List
	FM/Mode		AV / Input / RDS
	Surround		Eject / Surround
	DSP		Text / Goto
	Surround DSP		Sound / Title
	Dimmer		Shift + Mute / Dimmer
	Tv/Video		TV/Radio /
	Muting		Mute / Dimmer
	VCR CH+		Shift + CH+ /
	Tv CH+		CH+ / Page+
	Tv Vol+		Shift + Vol+
	Vol+		Vol+
	VCR CH-		Shift + CH- /
	Tv CH-		CH- / Page-
	Tv Vol-		Shift + Vol-





Mode





**Originalfernbedienung**    **Ersatzfernbedienung**

	Vol-		Vol-

**Originalfernbedienung**    **Ersatzfernbedienung**





**Originalfernbedienung Ersatzfernbedienung**

	1 TV Sound		1
	2 TV Sound		2
	3 TV Sound		3
	4 TV Sound		4
	5 TV Sound		5
	6 TV Sound		6
	7 TV Sound		7
	8 TV Sound		8
	9 TV Sound		9
	10 TV Sound		Guide / EPG / -/--
	0 TV Sound		0
	+10 TV Sound		Fav / Marker / PC
	Play		Play / Slow
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Rec Pause		Rec / Rec Mode

**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop / Hold
	TV Sound		Sound / Title

