



Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	Tv/Video		TV/R
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10/Tv Return		Guide
	+10/100+		Pre Ch
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Muting		Mute





Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10 / Tv Return		Guide
	+10 / 100+		Pre Ch
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right/Presets Up		Right
	Left/Presets Down		Left
	Muting		Mute
	Menu/PL		Menu
	Top Menu/PG	 + 	Shift + Menu
	On Screen		3D
	Back / Rec		Rec
	Stop / Memory		Stop
	Play		Play
	Pause/FM Mode		Pause
	I<</Tuning-		I<<
	>>I/Tuning+		>>I
	<</Slow-		<<
	>>/Slow+		>>
	Audio		Dual
	Angle	 + 	Shift + 3D





Originalfernbedienung Ersatzfernbedienung

	Zoom		Eject
	Subtitle		Subt
	Vol+		Vol +
	Vol-		Vol -
	Repeat		Text
	Page		List
	Surround		Smart
	PTY Search		AV
	TA/News/Info		Info
	PTY Select-		Shift + Left
	PTY Select+		Shift + Right
	Level+		Shift + Up
	Level-		Shift + Down
	Sleep		Sleep
	Return		Back
	Display		Shift + Info
	Play Mode		Format

Originalfernbedienung Ersatzfernbedienung

	STB Control		Shift + Smart
	Dimmer		Shift + Media
	USB Memory		Media
	Cancel		Exit
	DVD		Blue
	iPod		Red
	FM/AM		Green
	VCR/Video Control		Yellow
	Tv/Video		TV/R
	Set Up		D. Menu
	SPK Level		Shift + AV
	Setting		Options
	Treble/Bass		Shift + Sleep
	Title/Group		Shift + List
	VFP/Scan Mode		Shift + Options
	Tv Sound		Shift + Dual





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Power VCR/STB		Power
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
	Tv/Video		TV/R
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute

