



**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0		0
	AV		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

**Originalfernbedienung    Ersatzfernbedienung**

	Blue		Blue / Prime Video / Random
	TV/DTV		TV/Radio /
	P +		CH+ / Page+
	Menu		Menu / Home
	Up		Up
	Vol -		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol +		Vol+
	Down		Down
	Text / Top Menu		Text / Goto
	Text / Top Menu		D.Menu / Top
	P -		CH- / Page-
	Back		Back / Return
	Up / Hold		Smart / List
	Up / Hold		Shift + Stop / Hold



