



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Shift + Pre Ch
	Recall		Pre Ch
	Game		Media
	Auto		Smart
	Info		Info

**Originalfernbedienung Ersatzfernbedienung**

	Menu		Menu
	EPG		Guide
	Exit		Exit
	Up / CH + / I<<		Up
	Down / CH - / >>I		Down
	Right / Vol +		Right
	Left / Vol -		Left
	OK		Ok
	Up / CH + / I<<		I<<
	Down / CH - / >>I		>>I
	Up / CH + / I<<		Ch +
	Down / CH - / >>I		Ch -
	Left / Vol -		Vol -
	Right / Vol +		Vol +
	Red / Zoom		Red
	Green / Lan/Audio		Green
	Yellow /		Yellow



Play/Pause



**Originalfernbedienung   Ersatzfernbedienung**

TEXT	Blue / Text	<b>D</b>	Blue
ZOOM	Red / Zoom	ZOOM	Eject
LAN/AUDIO	Green / Lan/Audio	SOUND <b>DUAL</b>	Dual
PLAY/PAUSE	Yellow /	PLAY MODE	Play
PLAY/PAUSE	Yellow /	<b>  </b>	Pause
TEXT	Blue / Text	REPEAT <b>TEXT</b>	Text
TV/RADIO	<< / Tv/Radio	<b>&lt;&lt;</b>	<<
TV/RADIO	<< / Tv/Radio	SEARCH <b>TV/R</b>	TV/R
SUBTITLE	>> / Subtitle	<b>&gt;&gt;</b>	>>
SUBTITLE	>> / Subtitle	AD <b>SUBT</b>	Subt

**Originalfernbedienung   Ersatzfernbedienung**


