


Originalfernbedienung Ersatzfernbedienung

 
 


 

 
 

 
 
 
 



	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	TV		TV/R
	Menu		Menu
	Q.Menu		D. Menu
	World		Shift + Guide

Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	Back		Back
	Mute		Mute
	i		Info
	Guide		Guide
	[≡]/Text		Text
	Folder		Format
	[-O-]		Subt





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	* / O		Sleep				
	* / Q		Eject				
	Netflix		Media				
	Camera-Music-Ph		Options				
	YouTube		3D				
	[≡] ..		List				
	Lang		Dual				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Play		Play				
	Rec		Rec				
	Pause		Pause				
	>>		>>				
	<<		<<				
	Stop		Stop				

