 
 




 
 




Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Up		Up
	Power		Power
	Left		Left
	OK / Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Info		Info / Angle
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8


Originalfernbedienung Ersatzfernbedienung

	9		9
	Presets		Smart / List
	0		0
	P+		CH+ / Page+
	Return		Back / Return
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-
	Swap		Shift + Back / Return
	TV / DTV		TV/Radio /
	FAV		Fav / Marker / PC
	Source		AV / Input / RDS
	Red / Page+		Shift + CH+ /
	Red / Page+		Red / Netflix / Search
	Green / Page-		Green / APP / Repeat
	Green / Page-		Shift + CH- /
	Yellow		Yellow / YouTube / Repeat





**Originalfernbedienung**    **Ersatzfernbedienung**

	Blue		Blue / Prime Video / Random
	Screen		Picture / Format
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Sleep		Sleep / Timer
	[ ≡ ]		Text / Goto
	[ ≡ X ]		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	[ ■ ][ ■■ ]		Display / Media

**Originalfernbedienung**    **Ersatzfernbedienung**