


 
 

 

 

 
 
 

 
 
 
 
 




 

 


 
 
 
 



 
 
 

 

 

 
 





 


 
 

 






 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Smart
	VCR		Media
	TV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	Exit		Exit
	Menu		Menu
	Up		Up
	Left / Zoom-		Left
	OK / Mix		Ok
	Right / Zoom+		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Red / ●)))		Red
	Green / zZZ		Green
	Yellow / i		Yellow
	Blue		Blue
	Purple / Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	---- AV		Guide
	---- AV		AV



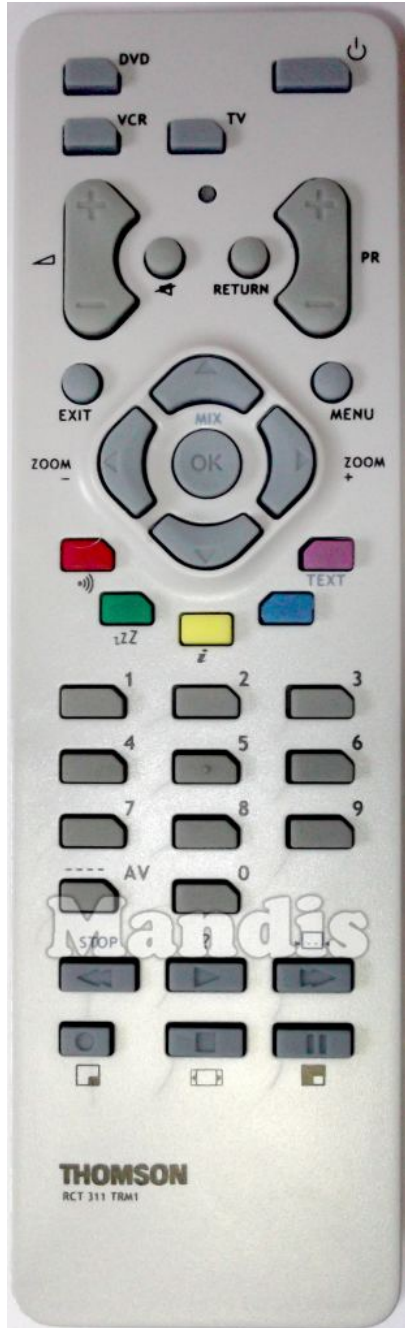 


Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	?		D. Menu
	>[.]<		3D
	[■]		Options
	[◀▶]		Format
	□		Subt

Originalfernbedienung Ersatzfernbedienung



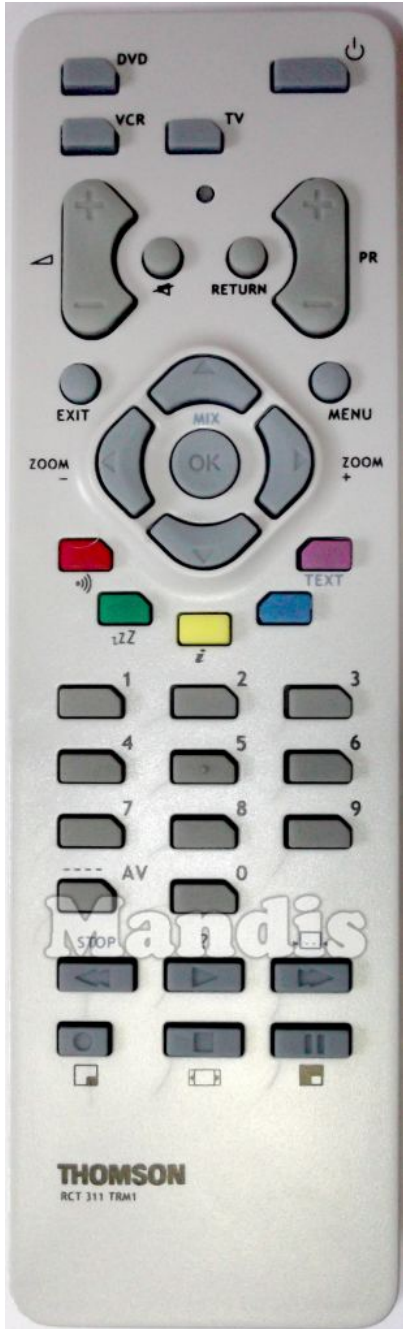

 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Smart
	VCR		Media
	TV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	Exit		Exit
	Menu		Menu
	Up		Up
	Left		Left
	Zoom-		I<<
	OK		Ok
	Right		Right


 






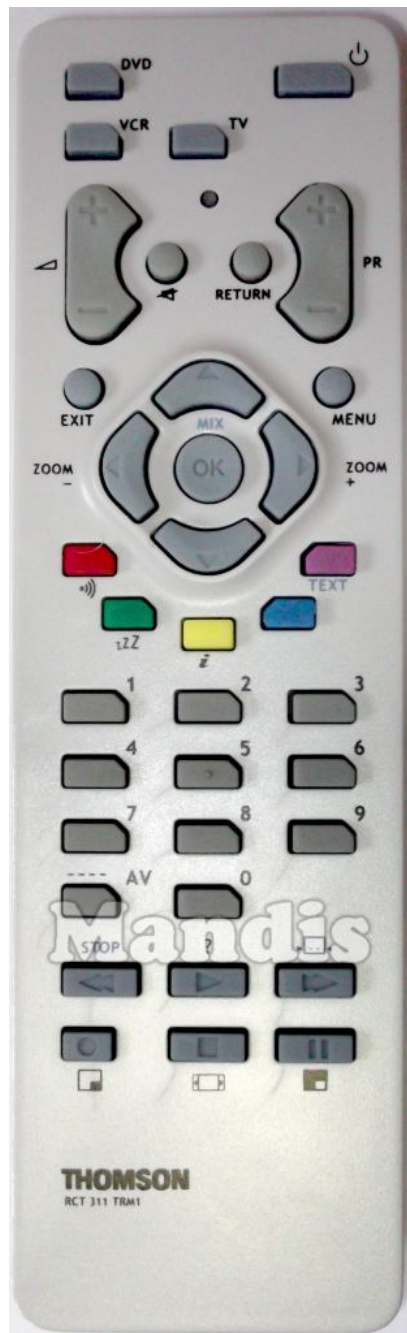








 
Originalfernbedienung Ersatzfernbedienung

	Zoom+		>>I
	Down		Down
	Red		Red
	Green		Green
	zZZ		List
	Info		Info
	Yellow		Yellow
	Blue		Blue
	Purple / Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



 


Originalfernbedienung Ersatzfernbedienung


 
 
 
 
 
 
 
 

 


 

	9		9
	0/--		0
	AV		AV
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

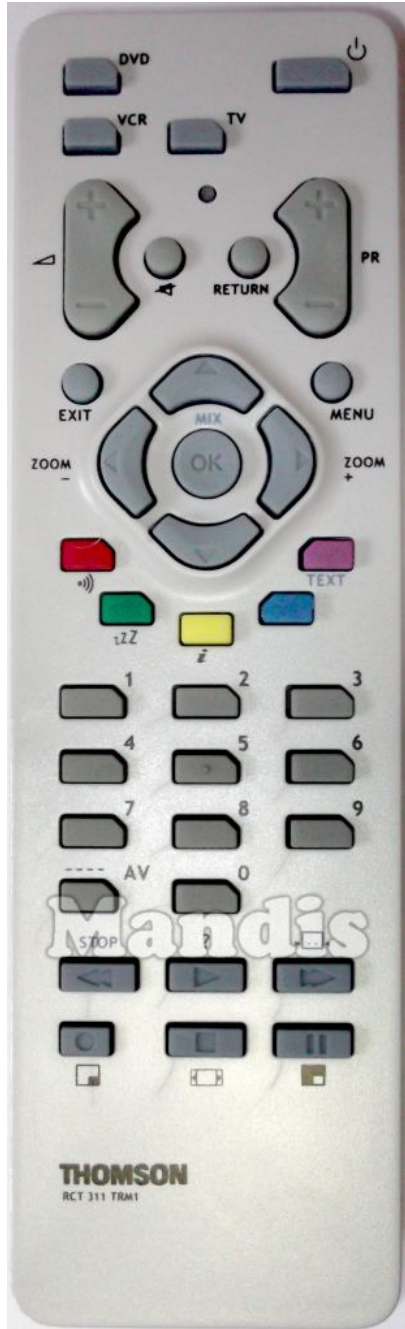



 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Smart
	VCR		Media
	TV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Return		Back
	PR+		Ch +
	PR-		Ch -
	Exit		Exit
	Menu		Menu
	Up		Up
	Left		Left
	Zoom-		I<<
	OK		Ok
	Right		Right





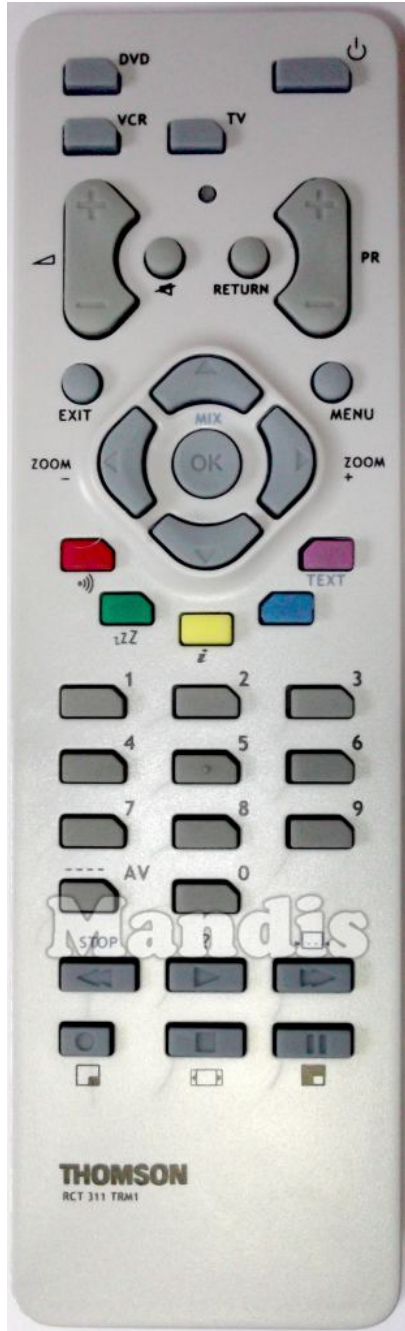


 
 




 



Originalfernbedienung Ersatzfernbedienung

	Zoom+		>>I
	Down		Down
	Red		Red
	Green		Green
	zZZ		List
	Info		Info
	Yellow		Yellow
	Blue		Blue
	Purple / Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

	9		9
	0/--		0
	AV		AV
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Stop		Stop
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

