 



 











 















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Play/Pause |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
| | EQ.Effect |  | Sound / Title |
| | S.W.Effect |  | Audio / Lang I/II |
| | P.Open/Close |  | Eject / Surround |
| | P.Mode |  | Picture / Format |
|  | Sleep |  | Sleep / Timer |
|  | Tuner Band |  | TV/Radio / |
| | Presence |  | D.Menu / Top |
| | AI/Loudness |  | Setup / OPT / |
| | AI/Auto/Focus/GE |  | Text / Goto |
| | LD/AUX |  | AV / Input / RDS |
| | Up |  | Up |

Originalfernbedienung Ersatzfernbedienung












| | | | |
|---|------------------|---|-----------------------|
| | Left |  | Left |
| | Check |  | OK |
| | Right |  | Right |
| | Clear |  | Exit / Cancel / Clear |
| | Down |  | Down |
|  | Volume Control + |  | Vol+ |
| | M.Call |  | Smart / List |
|  | P.Call Up |  | CH+ / Page+ |
|  | Volume Control - |  | Vol- |
| | Display |  | Display / Media |
|  | P.Call Down |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
| | +10 |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
| | Edit |  | Fav / Marker / PC |
| | Repeat |  | Green / APP / Repeat |
| | S.W.Power |  +  | Shift + Power |
| | Off |  +  | Shift + Mute / Dimmer |
| | S.W.Vol+ |  +  | Shift + Vol+ |
| | P |  +  | Shift + Smart / List |
| | S.W.Vol- |  +  | Shift + Vol- |
|  | Changer CD 1 |  +  | Shift + 1 |
|  | Changer CD 2 |  +  | Shift + 2 |
| | CD |  +  | Shift + 3 |
|  | Changer CD 4 |  +  | Shift + 4 |
| | Tape |  +  | Shift + 5 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------|
| | Tuner |  +  | Shift + 6 |
|  | Changer CD 3 |  +  | Shift + 7 |
|  | Changer CD 5 |  +  | Shift + 8 |
|  | Changer CD 6 |  +  | Shift + 9 |



