








**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute / Dimmer
	[<>]		Picture / Format
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0		0
	Swap		Back / Return
	Swap		D.Menu / Top
	PC		Fav / Marker / PC





 
**Originalfernbedienung Ersatzfernbedienung**

	TV		TV/Radio /
	Menu		Menu / Home
	Text / Mix		Text / Goto
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol+		Vol+
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[ i ]		Info / Angle





Originalfernbedienung Ersatzfernbedienung

	[?]		Smart / List
	[+]		Zoom / Size
	[◆]		Display / Media
	[≡x]		Eject / Surround
	[:≡]		Guide / EPG / -/-
	[ ]		Subtitle / EQ
	♪		Sound / Title

Originalfernbedienung Ersatzfernbedienung