


 


 

 

 


 
 
 

 

 

 

 



 

 
 
 
 


 
 


 
 
 
 


 
 
 
 
 
 
 
 

 
 
 

 

 


 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|--------|
|  | Power |  | Power |
|  | My Apps |  | Media |
|  | TV/Radio |  | TV/R |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | List |  | List |
|  | Q.View |  | Format |
|  | Input |  | AV |
|  | Q.Menu/Subtitle |  | Subt |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|---------|
|  | Guide |  | Guide |
|  | Info |  | Info |
|  | Mute |  | Mute |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Page+ |  | Ch + |
|  | Page- |  | Ch - |
|  | Text |  | Text |
|  | T.Opt |  | Options |
|  | Smart |  | Smart |
|  | FAV |  | Pre Ch |
|  | Back |  | Back |
|  | Exit |  | Exit |
|  | OK |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|---|-----------------|
| | Left | | Left |
| | Red | | Red |
| | Green | | Green |
| | Yellow | | Yellow |
| | Blue | | Blue |
| | Stop/Line TV | | Stop |
| | Rec/* | | Rec |
| | Play | | Play |
| | Pause | | Pause |
| | >> | | >> |
| | << | | << |
| | APP/* | + | Shift + Media |
| | AD | + | Shift + Subt |
| | Settings | + | Shift + Options |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

