


 



 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV/RAD		TV/Radio /
	Input		AV / Input / RDS
	AV Mode		Picture / Format
	Energy Saving		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		Display / Media

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	PR-/Page Down		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green/Stop		Green / APP / Repeat
	Green/Stop		Stop / Hold
	Yellow/Play		Yellow / YouTube / Repeat
	Yellow/Play		Play / Slow



