

 
 
 




 

 
 









 


 
 
 
 


 
 




 
 









 


 
 
 

 



 

 

 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eco/Energy		3D
	AV Mode		Shift + AV
	Input		AV
	Tv/Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Eject

Originalfernbedienung Ersatzfernbedienung

	FAV/Mark/Char/Nu		Pre Ch
	Ratio		Format
	Mute/Delete		Mute
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Premium		Smart
	Q.Menu		D. Menu
	Home		Menu
	Back		Back
	Guide		Guide
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			

