



Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	Vol-		Vol -
	Vol+		Vol +
	Mono		Dual
	Bal L		Left
	Bal R		Right
	AUX		AV

Originalfernbedienung Ersatzfernbedienung

	Record		Rec
	Listen		Smart
	TP1		Red
	TP2		Green
	TUN		Blue
	PH1		Format
	PH/AUX 2		3D
	CD		Yellow



 

 









Originalfernbedienung Ersatzfernbedienung

	I<< Skip		I<<
	Skip >>I		>>I
	Open		Eject
	<< Search		<<
	Search >>		>>
	Play		Play
	< Index		Left
	Index >		Right
	Pause		Pause
	Display		Info
	Repeat		Text
	Stop		Stop
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	Vol-		Vol -
	Vol+		Vol +
	Bal L		Ch -
	Bal R		Ch +












 



 

 



 


 


 

 
 

 

 



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Mute		Mute				
	Vol-		Vol -				
	Vol+		Vol +				
	On / Off		Power				
	Bal L		Left				
	Bal R		Right				
	AV		AV				
	Sleep		Sleep				





 



 


 







Originalfernbedienung    Ersatzfernbedienung

	Tune-		Ch -
	Tune+		Ch +
	Preset		Smart
	Scan		Media
	Tune		TV/R
	Band		Dual
	Signal		Back
	Store		Exit
	Mono		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung    Ersatzfernbedienung

	9		9
	0		0
	Mute		Mute
	Vol-		Vol -
	Vol+		Vol +
	Bal L		Left
	Bal R		Right

